


Husky Model 4885 2-Inch Threaded Pressure/Vacuum Vent Valve

PRESSURE/VACUUM VENT MODEL 4885 INSTALLATION AND MAINTENANCE INSTRUCTIONS INSTALLATION

The P/V Vent is designed to fit on top of a 2" vent pipe. Remove the P/V Vent from the carton and visually inspect for any shipping damage.

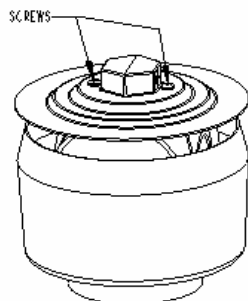

Model 4885 Thread-On P/V Vent

Apply fuel resistant pipe sealant to the threads on the 2" vent stack. Screw the P/V Vent onto the vent stack and tighten to a range of 20 to 50 ft-lbs with a suitable wrench. **DO NOT OVERTIGHTEN.** Periodic maintenance is recommended (see below).

MAINTENANCE

Annually inspect the P/V Vent valve for foreign objects without removing the P/V Vent valve from the vent pipe by using the following procedure:

1. Remove the screws that hold the top cover on.
2. Remove any debris that might be sitting inside the lower cover.
3. Check the drain holes in the lower cover for blockage.
4. The two (2) screens should not be removed.
5. Reinstall the top cover and retaining screws.
6. Tighten the screws firmly.

NOTE: DO NOT ALTER OR COVER THE P/V VENT

TESTING CRITERIA

Leak rate: Pressure = .05 CFH at 2" WC, Vacuum = .21 CFH at -4" WC. Cracking Pressure: 2 1/2" to 3 1/2" WC, Vacuum = -6" to -10" WC.

Per ARB procedure TP-201.1E or the applicable ARB Executive Order.

PRESSURE VACUUM VENT WARRANTY INFORMATION

Husky Corporation will, at its option, repair, replace, or credit the purchase price of any Husky manufactured Pressure Vacuum Vent which proves upon examination by Husky, to be defective in material and/or workmanship within EIGHTEEN (18) MONTHS from the date of shipment for any Husky Pressure Vacuum Vent, except as otherwise provided herein. For all other Husky manufactured product, see Husky Form No. PS2002-Term (4/15/02) at www.husky.com.

The warranty period on repaired or replacement product is only for the remainder of the warranty period. Buyer must return the products to Husky, transportation charges prepaid. This Warranty does not apply to equipment or parts which have been installed improperly, damaged by misuse, improper operation or maintenance, or which are altered or repaired in any way other than by Husky.

The Warranty provisions contained herein apply **ONLY** to original purchasers and subsequent commercial purchasers within the warranty period who use the equipment for commercial or industrial purposes. **THERE ARE NO OTHER WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, AND ANY OTHER SUCH WARRANTIES ARE HEREBY SPECIFICALLY DISCLAIMED.**

Husky assumes **NO LIABILITY** for labor charges or other costs incurred by Buyer incidental to the service, adjustment, repair, return, removal or replacement of products. **HUSKY ASSUMES NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL, OR OTHER DAMAGES UNDER ANY WARRANTY, EXPRESS OR IMPLIED, AND ALL SUCH LIABILITY IS HEREBY EXPRESSLY EXCLUDED.**

Husky reserves the right to change or improve the design of any Husky fuel dispensing equipment without assuming any obligations to modify any fuel dispensing equipment previously manufactured.



**HUSKY CORPORATION • 2325 HUSKY WAY
• PACIFIC, MO 63069**
www.husky.com PHONE: 800-325-3558

Healy Systems, Inc.
18 Hampshire Drive

Hudson, New Hampshire 03051 USA

ARB Approved Installation, Operation and Maintenance Manual (August 31, 2005)

Website: <http://www.healysystems.com>

Email: sales@healysystems.com

Telephone: 603.882.2472

Fax: 603.882.5189



Healy Systems, Inc. – the innovative leader of Stage II vapor recovery equipment